


1. Mark your holes using a pencil.

2. Using a  $\text{\O}4.5\text{mm}$  drill bit, drill holes 40mm deep.


3. Insert screw into the holes and tighten them using the spanner provided.

4. Slide and twist cover until its flush with the wall.

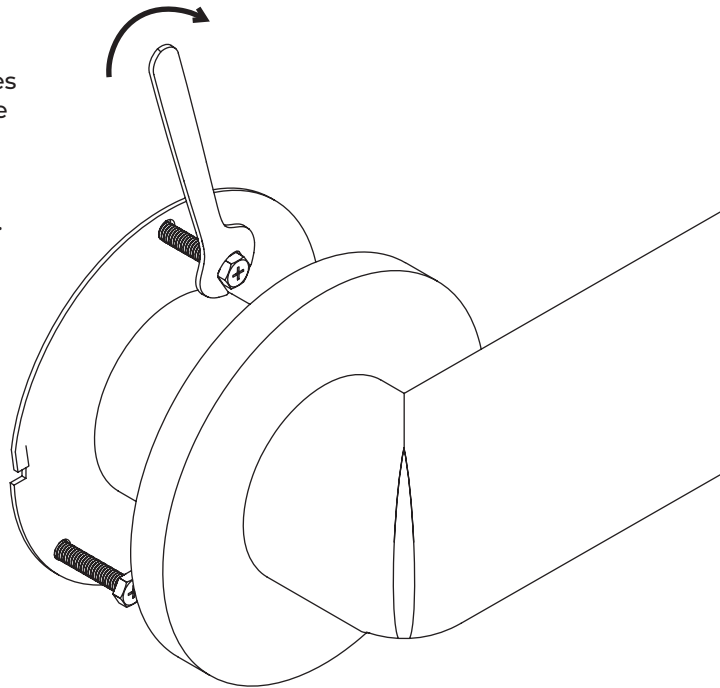

# Instruction Guide

## Grab Rail

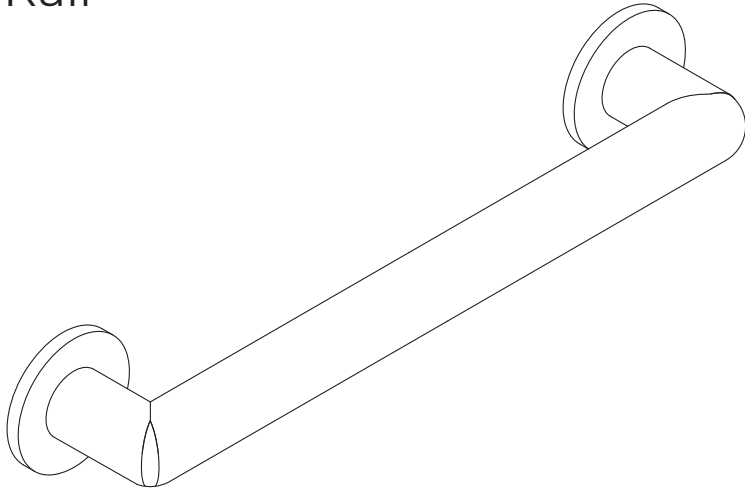

### IMPORTANT INFORMATION

v1-010324

Before Installing please identify that you have all the kit parts as listed below.

---

Proper fitting of this item is **extremely important**.

This is suitable for **DIY** fitments however if the necessary tools and expertise are not available, we would recommend installation by a **qualified tradesperson**.

Ensure your wall is in sound condition prior to fitting.

The screws provided are for wood only or for use with suitable plastic wall plugs.

Ensure that no hidden pipes or cables will interfere when installing.

Ensure that **eye protection** is worn throughout the installation.



Protective Eyewear

#### Kit Parts Included



Grab Rail



6x Screws



Spanner

#### Tools for installation



Power Drill




Optional Spirit Level



Pencil



4.5mm Drill bit



Optional Measuring Tape